

FIG. 1


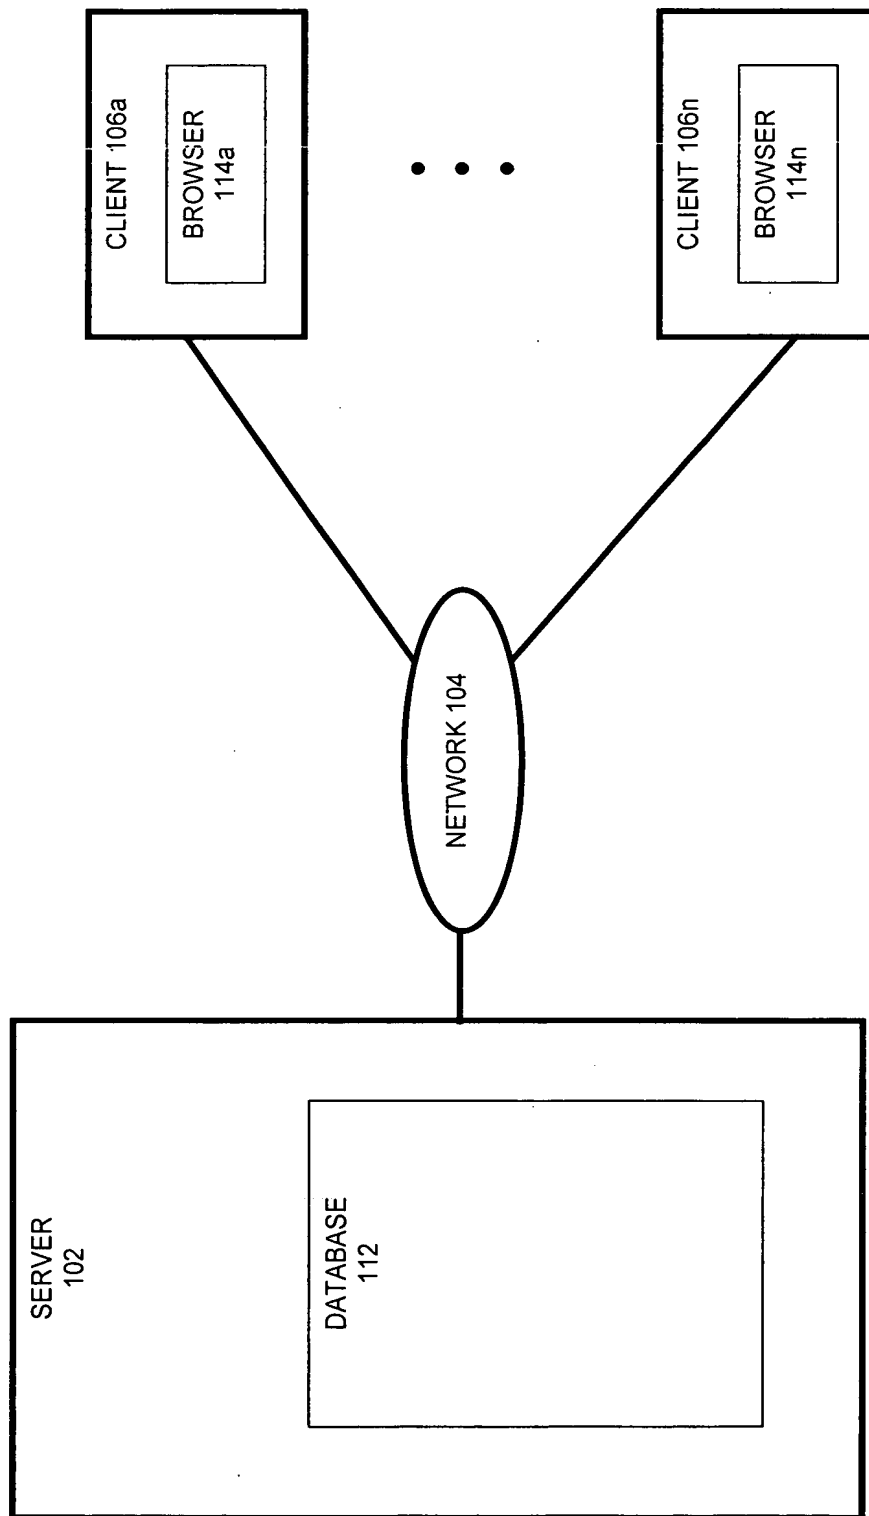


FIG. 2

SERVER  
102

MEMORY  
200

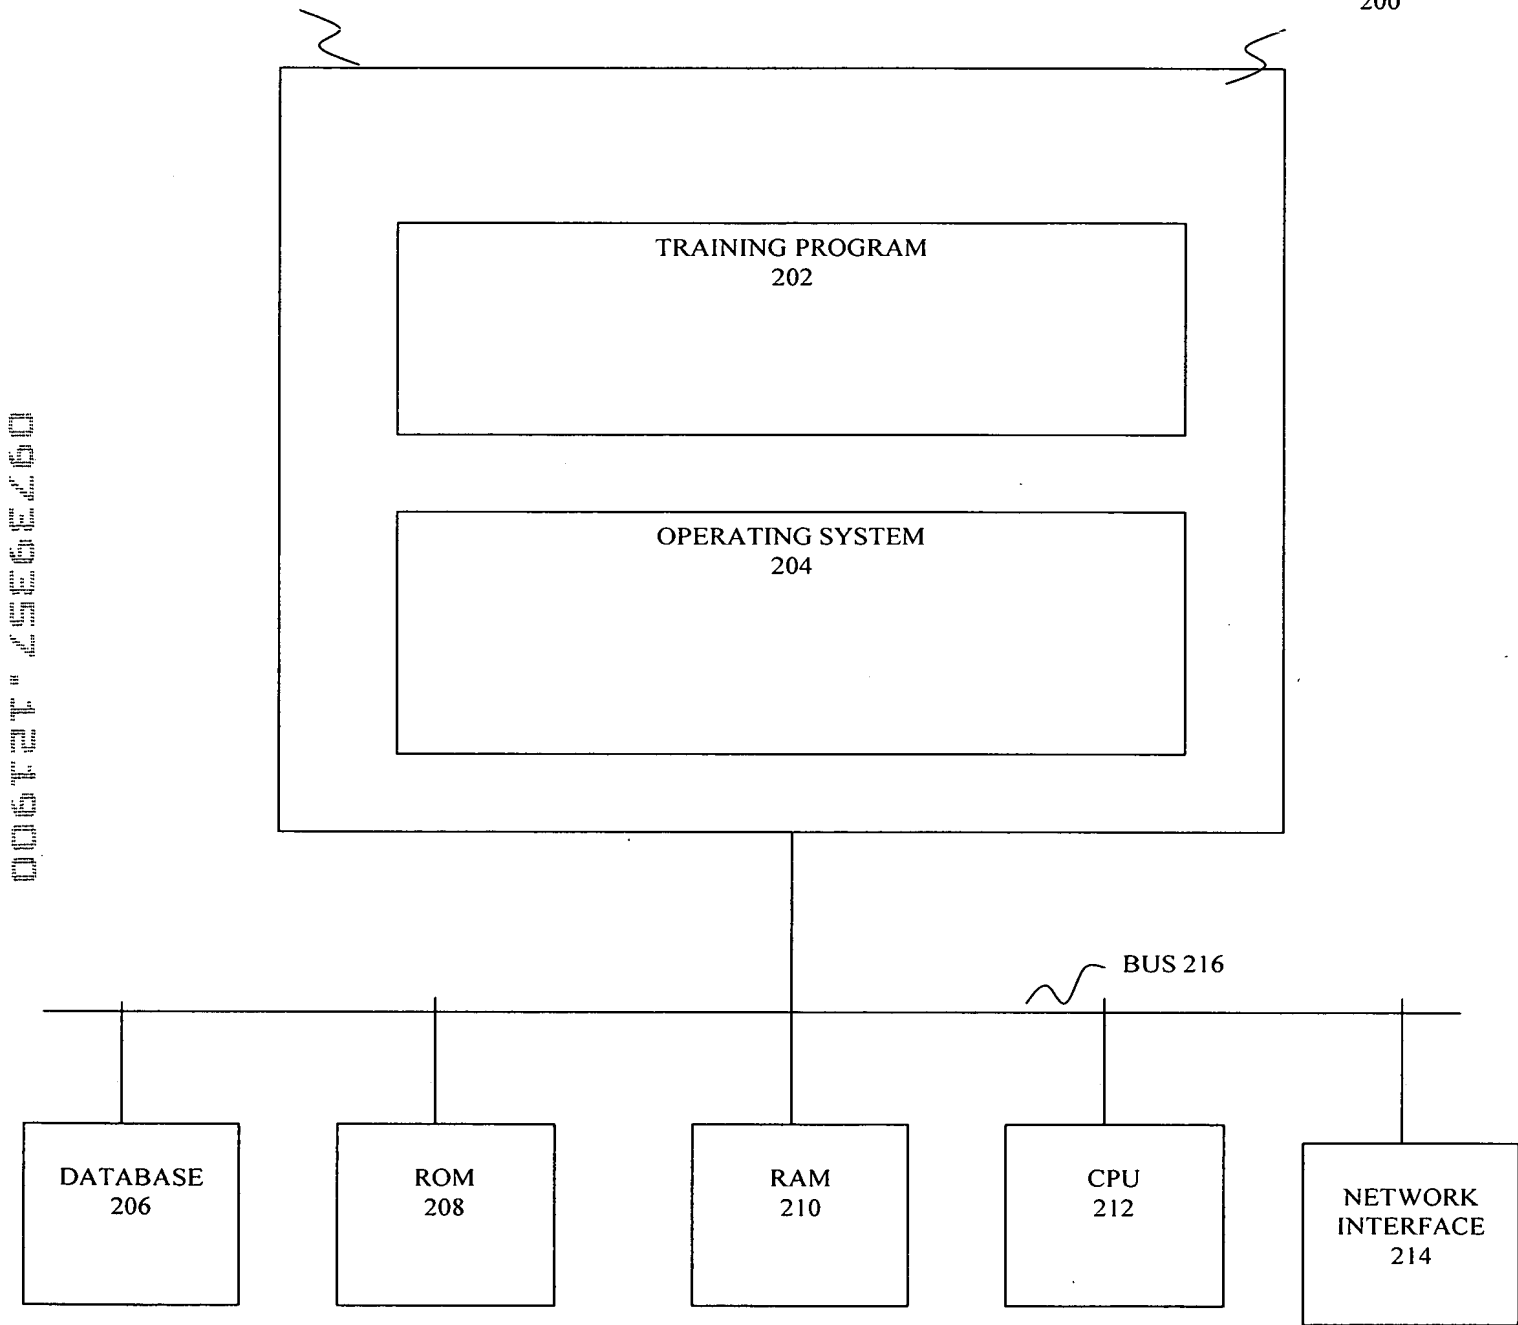

**FIG. 3**

USER COMPUTER 106

MEMORY 302

BROWSER PROGRAM  
304

OPERATING SYSTEM  
306

BUS 318

ROM  
308


RAM  
310

DISPLAY  
INTERFACE  
312


CPU  
314

NETWORK  
INTERFACE  
316

00527" 45666460

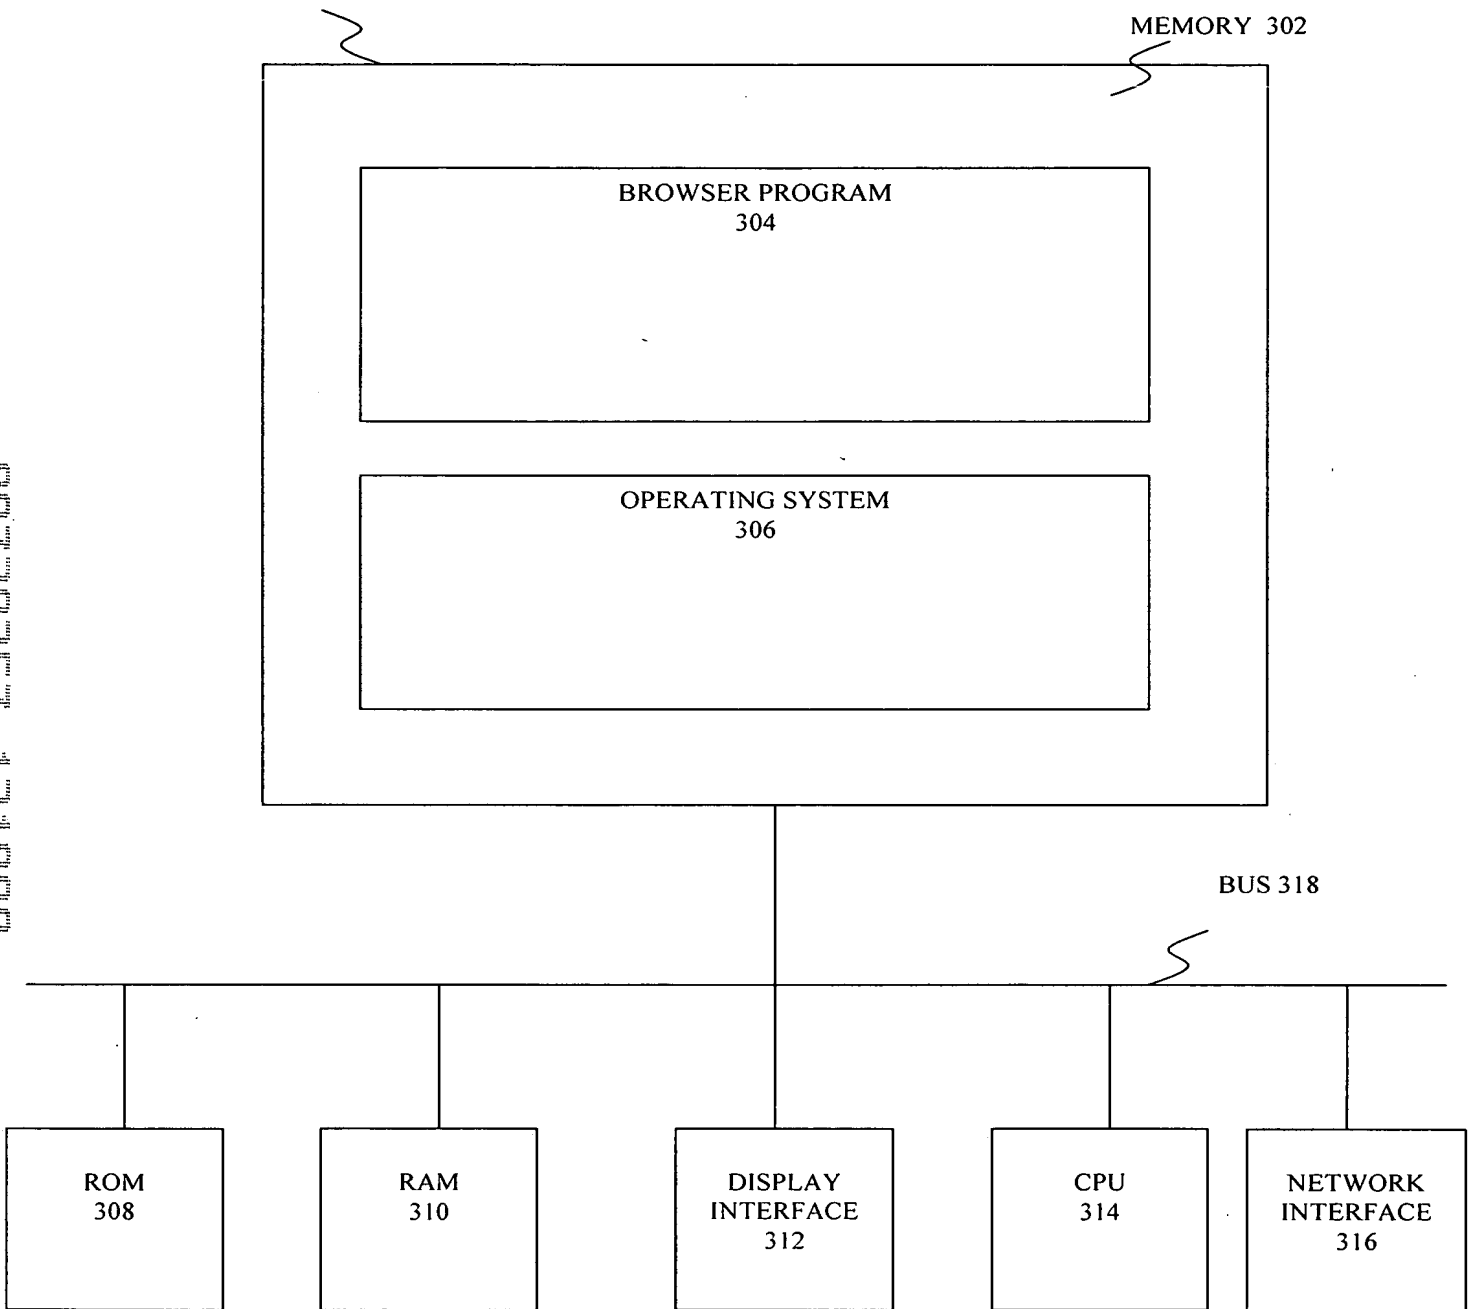


**FIG. 4**

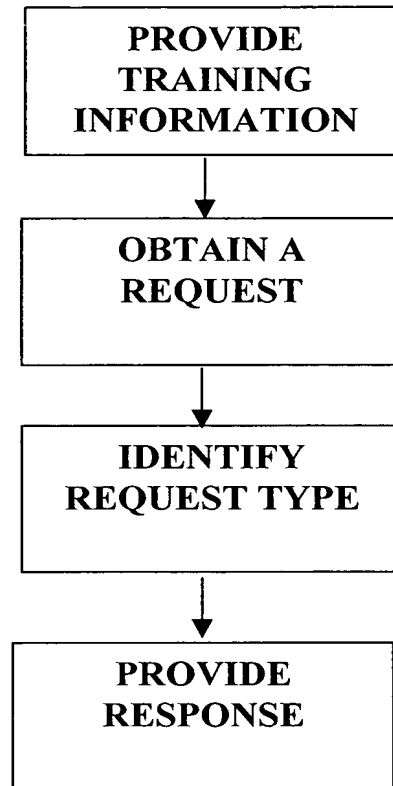

006727 4566260


FIG. 5

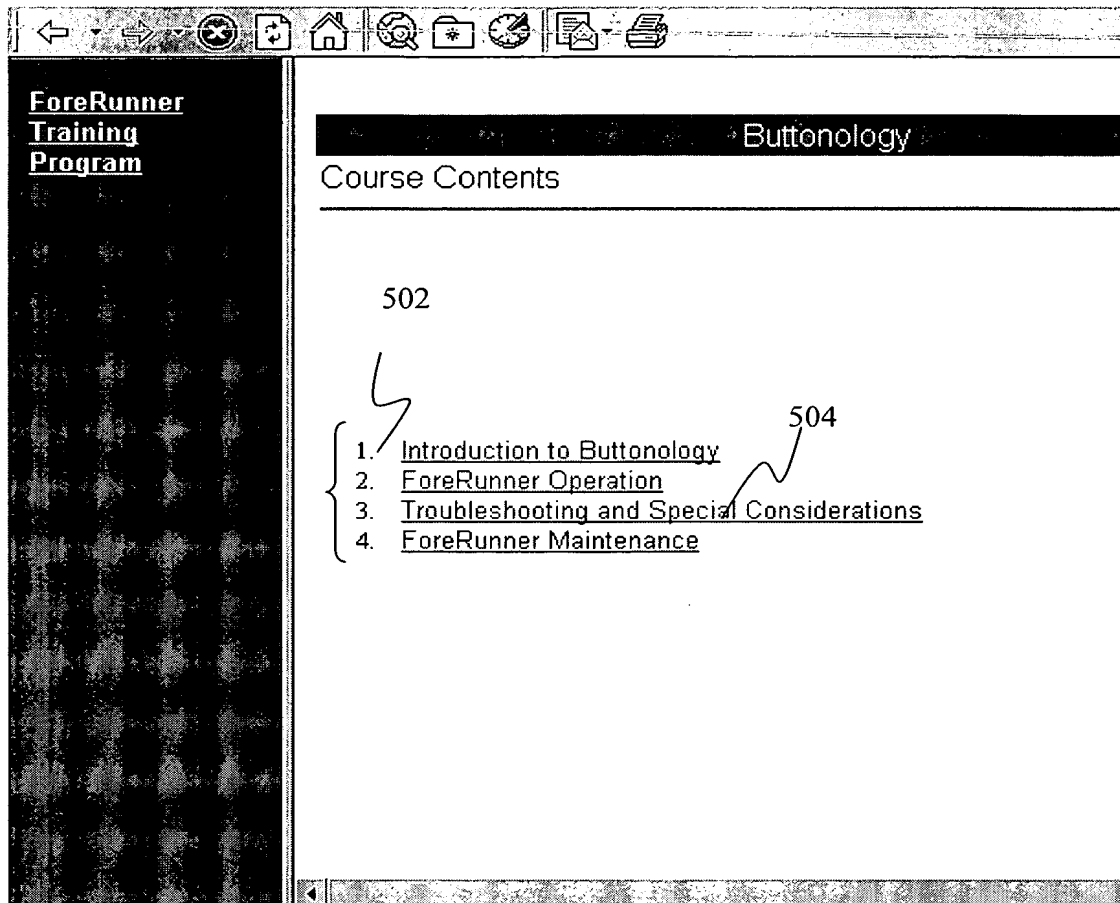

006T2T" /5E6E/60

# FIG. 6


600

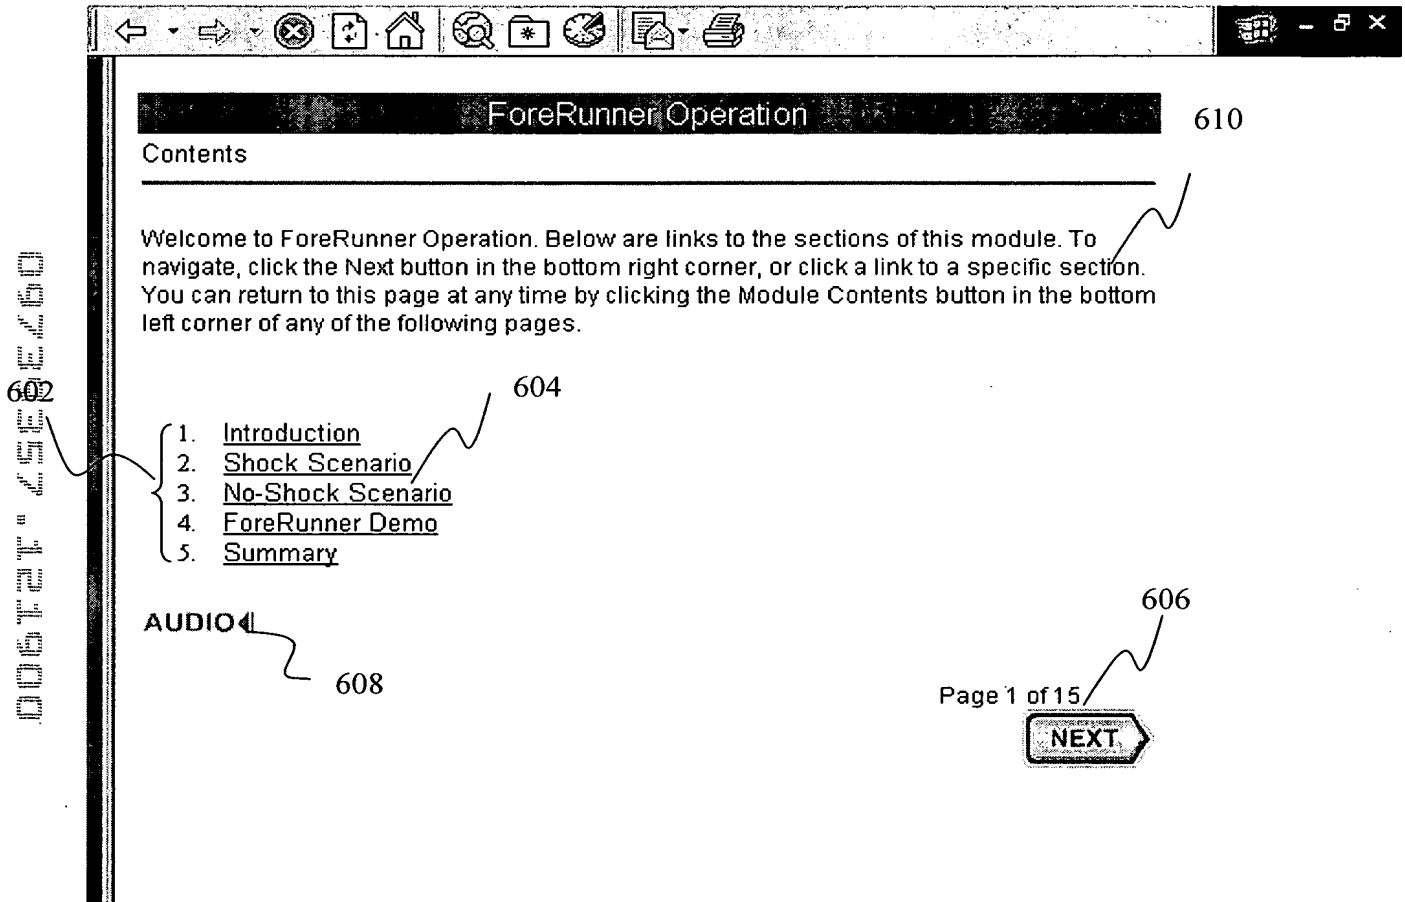

# FIG. 7

700

006T2T" 2566E260

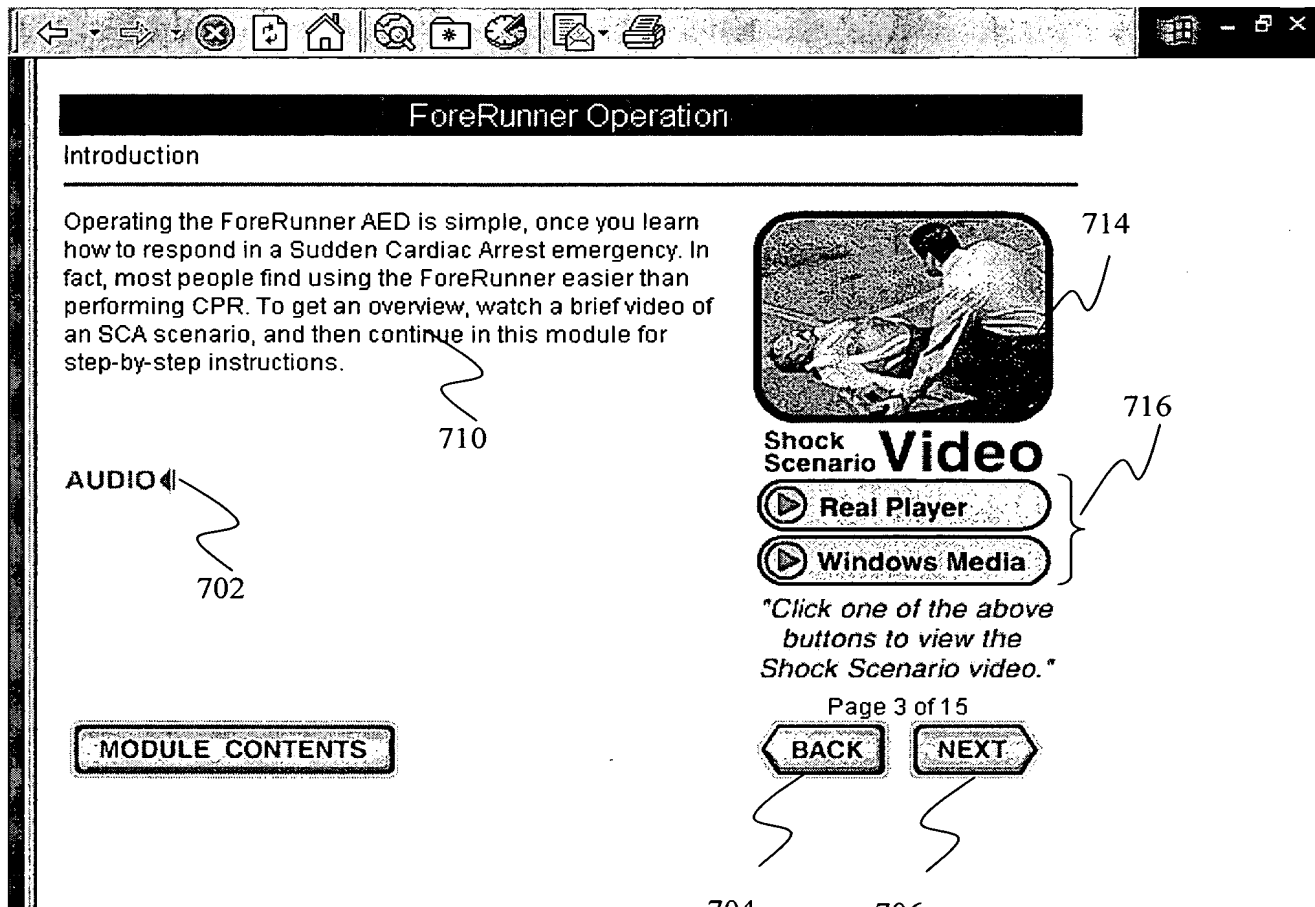

# FIG. 8

800

006T2T 256E260

← → ↻ ⌂ 🔍 ⚙️ 📄 🖨️

⌂ - ☐ ✕

ForeRunner Operation


Shock Scenario

Open the electrode pads package and remove the pads. Following the pad icons, place one pad just below the patient's right collarbone. Place the other pad on the patient's left side, over the ribs below the breast. After assuring that the pads are firmly attached to the patient's chest, plug in the pads connector next to the flashing light on the ForeRunner.

AUDIO 🔊

820

Place Pads

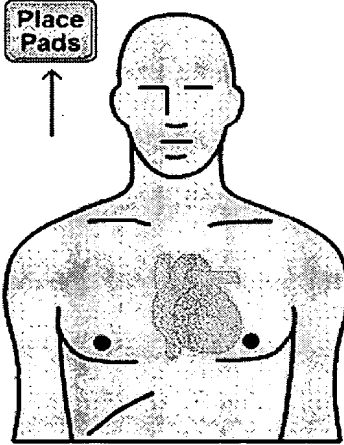

MODULE CONTENTS

Page 8 of 15


BACK

NEXT



# FIG. 9

900

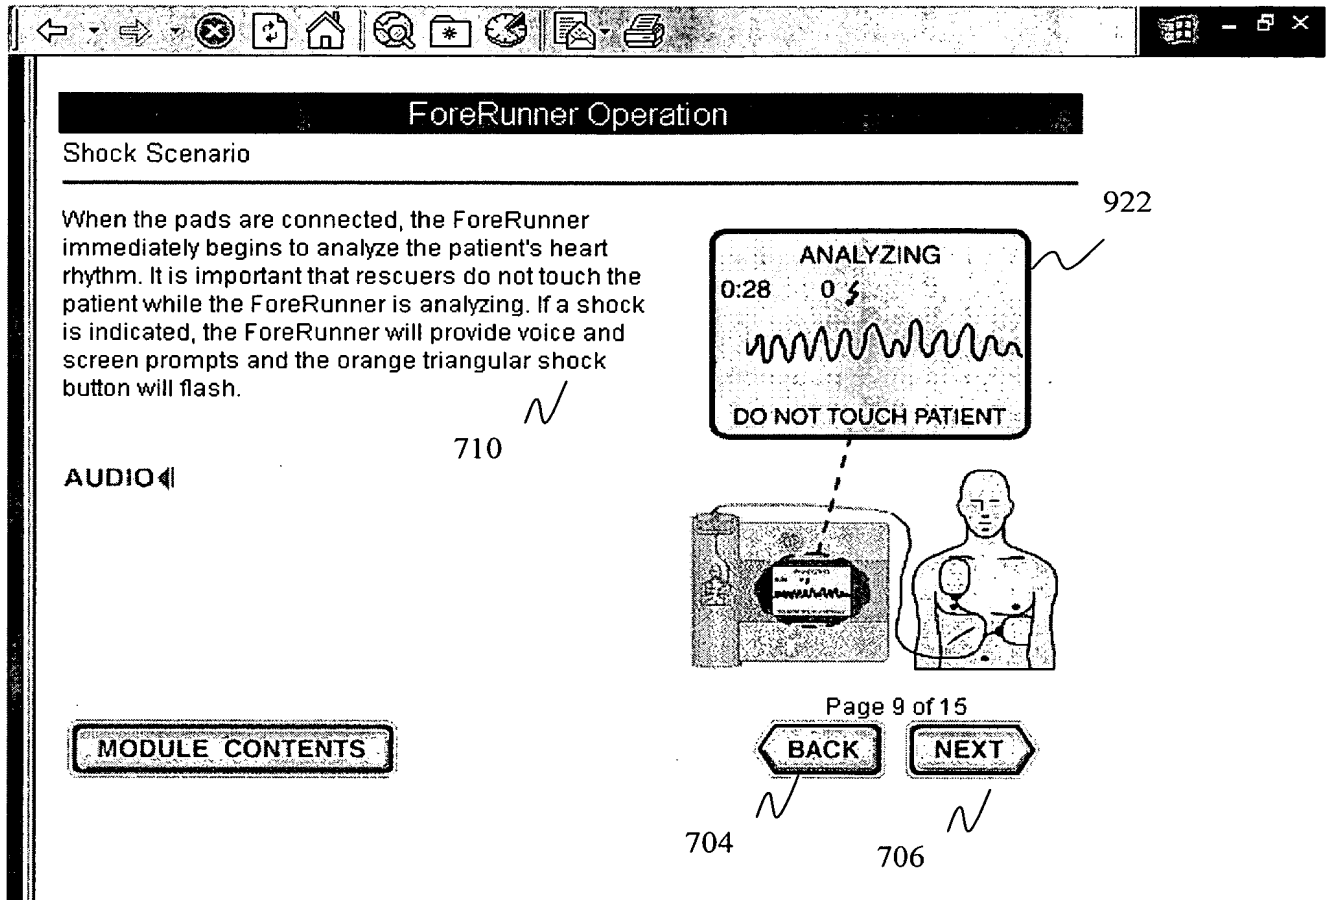

006T2T" / 5E6E / 60

FIG. 10

1000

006T2T" 4566E460

ForeRunner Operation

Shock Scenario

Before delivering the shock, it is important that the ForeRunner operator visually and verbally clears the patient. The ForeRunner operator should shout, "I'm clear," "you're clear," or simply "clear." Visually check to be certain that no one is touching the patient.

710

1518


1024

AUDIO

MODULE CONTENTS

Page 10 of 15

BACK NEXT

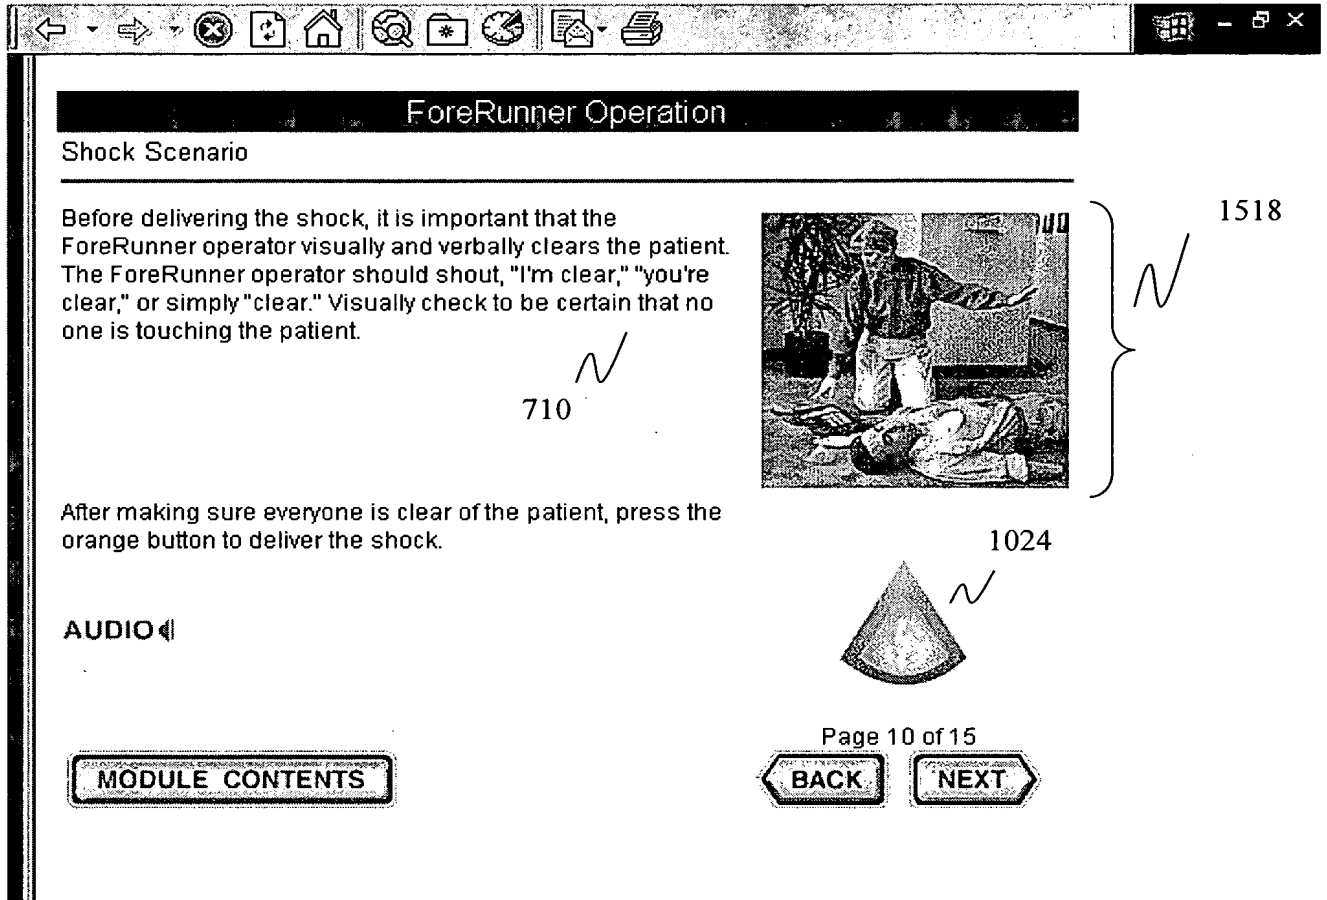

# FIG. 11

1100

